

INSTALLATION CONTINUED

4 REMOVE HOOK & LOOP BACKING

Remove the insert from the visor and remove the adhesive tape backing on the hook and loop strips.



5 SECURE HOOK & LOOP BACKING TO VISOR

Secure the Anti-Fog Insert onto the visor following the alignment procedures from Step 3. Firmly press on the exposed adhesive strips to secure.

NOTE: Allow the adhesive to set for at least 1 hour before attempting to detach the Anti-Fog Insert from the visor lens.



6 REMOVE PROTECTIVE FILM

Remove the protective film from the Pinlock Insert.



CLEANING & CARE

- 1 Clean the insert using Isopropyl wipes, or warm water and mild soap.
- 2 Pat dry with a soft cloth.

NOTE: IF ANY DEFECTS ARE FOUND, THE DAMAGED COMPONENTS SHOULD BE REPLACED BEFORE USE.


www.ops-core.com

ops-core®

PINLOCK

OPS-CORE® RIOT/BREACHING VISOR PINLOCK® ANTI-FOG INSERT

OPERATOR'S MANUAL

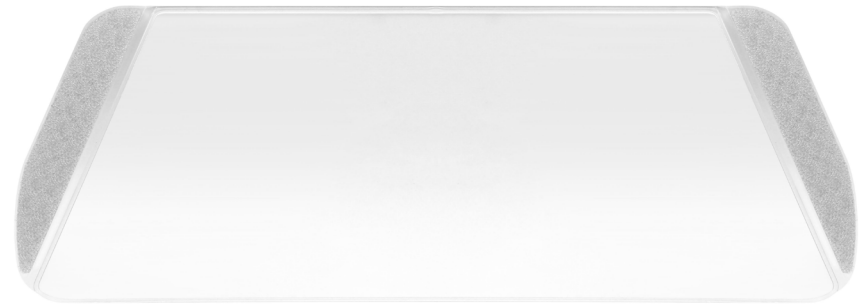

For use with the Ops-Core Riot/Breaching Visor

This product is covered by one or more patents.
For more information visit www.gentexcorp.com/patents

UM-1076 REV-A

© 2021 Gentex Corporation. Ops-Core is a registered trademark of Gentex Corporation or its affiliates.
Pinlock is a registered trademark of Pinlock Systems B.V.

INTRODUCTION

ABOUT THE PINLOCK® ANTI-FOG INSERT

Gentex Corporation has teamed up with Pinlock to offer an Anti-Fog Insert available as a scalable accessory for the Ops-Core Riot / Breaching Visor.

The Anti-Fog insert is specifically designed to absorb moisture and prevent fogging, keeping the field of vision clear and the focus on the mission.




WARNING: Gentex Corporation has tested and approves the use of the Pinlock Anti-Fog Insert on the Ops-Core Riot / Breaching Visor attached to Super High Cut Helmets equipped with Ops-Core ARC Rails.

Use of the Riot / Breaching Visors with the Pinlock Anti-Fog Insert on other helmet configurations could result in obstruction to line of site and interference with proper field of vision.

PART NUMBERS

Description	Part Number
Pinlock Anti-Fog Insert	A15038-1
Riot / Breaching Visor - SOLD SEPARATELY	H10900-1

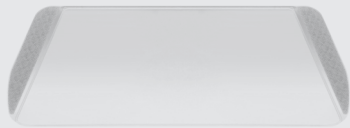

Pinlock Anti-Fog Insert



Riot / Breaching Visor

INSTALLATION

1 REMOVE THE VISOR FROM THE HELMET


Follow your Riot/Breaching Visor Operator's Manual to remove the visor from the helmet.

2 CLEAN THE VISOR LENS

Clean the visor lens using Isopropyl wipes, or warm water and mild soap. Pat dry with a soft cloth.

3 TEST-ALIGN THE INSERT WITH THE VISOR

Insert the Pinlock Anti-Fog Insert into the visor by aligning the top of the insert to be parallel to the top of the visor, and the angled bottom edges of the Pinlock insert to coincide with the corners of the visor.

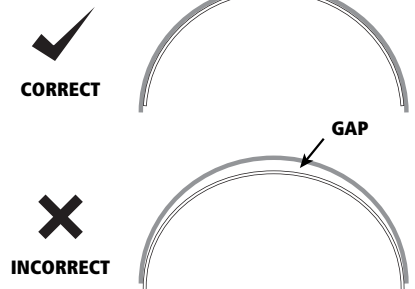

For best use and field of view, position the insert as high as possible without interfering with the hardware, there should be very little gap visible from the front of the visor.

There must be a tight seal between the visor lens and insert or the anti-fog properties will not work properly. If there are gaps, re-adjust until the insert is flush with the visor.