
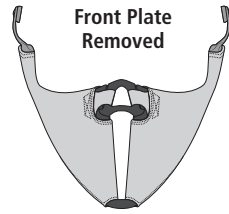


FRONT PLATE ATTACHMENT


DETACHABLE FRONT PLATE:

Front Plate provides extra protection against debris. It can be removed for better ventilation.

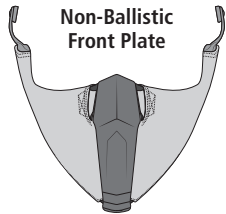


DETACHING THE FRONT PLATE

Pinch and push forward on the Bottom Front Plate Hook to release it from the Bottom Frame Connector as shown. Then unhook from top Plate Hook to remove.

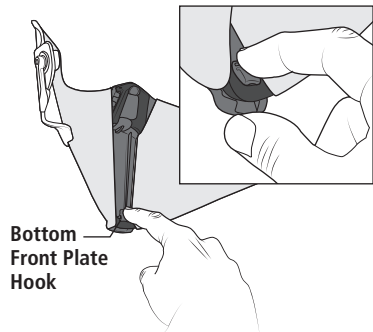

ATTACHING THE FRONT PLATE

Push the Front Plate's Top Hooks up and under the Mandible's Frame Connectors. Then, snap Bottom Front Plate Hook up and over the Bottom Frame Connector.

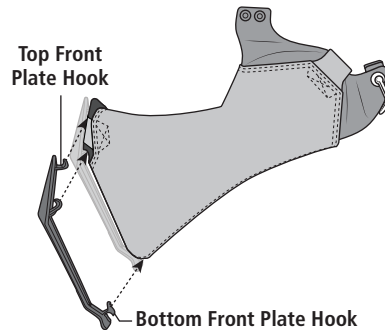


CLEANING & CARE

- 1 Spot clean the Gunsight Mandible with a mild detergent and water.*
- 2 Visually check the entire Gunsight Mandible for signs of breakage.
- 3 Clean dust and dirt by using air pressure.
- 4 Check that the Cam-Loc Handles work properly.

*Do not machine wash fabric.

NOTE: IF ANY DEFECTS ARE FOUND, THE DAMAGED COMPONENTS SHOULD BE REPLACED BEFORE USE.

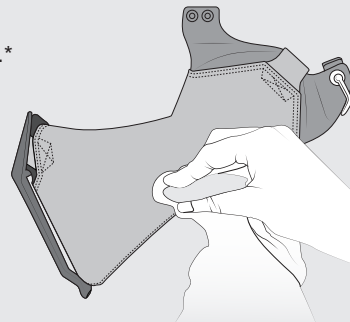

www.ops-core.com


ops-core[®]

FAST
FUTURE ASSAULT SHELL TECHNOLOGY

GUNSIGHT MANDIBLE

OPERATOR'S MANUAL



FOR FAST HIGH CUT &
SUPER HIGH CUT HELMETS


© OPS-CORE 2017 06-15-000 REV. B

INTRODUCTION

ABOUT YOUR GUNSIGHT MANDIBLE:


This manual covers the installation and basic operating instructions for the Ops-Core Gunsight Mandible. The Gunsight Mandible provides face protection for FAST helmet users. Donning the mandible allows a user to quickly adjust the degree of coverage to match different threat levels and environments.

The mandible uses a combination of soft armor or foam and support frame technology. It can be paired with eye wear or goggles for added protection and is designed to fold in half to conveniently fit into a rucksack. This flexibility allows a close cheek weld and causes minimum interference with sighting shoulder weapons.

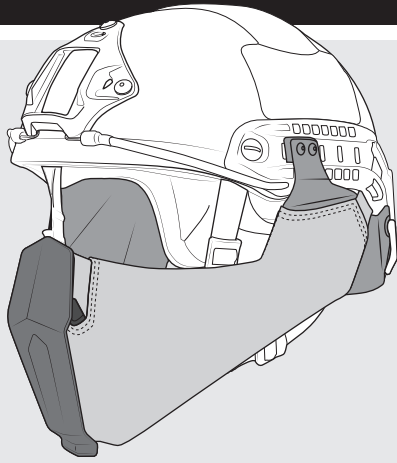

GUNSIGHT MANDIBLE KIT INCLUDES:

(1) Gunsight Mandible with Non-Ballistic Front Plate

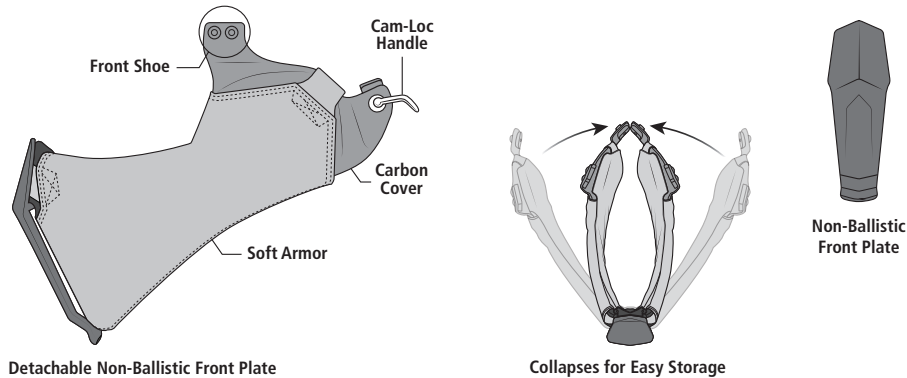

GUNSIGHT MANDIBLE BALLISTIC INFORMATION:

Standard US Army ACH Ballistic Performance, NIJ-IIIA, STAGNAG 2920

NOTE: FRONT PLATE EXCLUDED - FRONT PLATE OFFERS NO BALLISTIC PROTECTION

Projectile	Velocity	Req. V50	Projectile	Velocity	Req. V50
2 grain	3100 fps (945 m/s)	●	17 grain	2200 fps (670 m/s)	●
4 grain	2550 fps (777 m/s)	●	9mm FMJ RN	1200 fps (366 m/s)	V0 at 0° Obliquity
16 grain	2250 fps (686 m/s)	●			


MANDIBLE INSTALLATION

ATTACHMENT

The Gunsight Mandible attaches to the FAST Side Rails. Attachment is tool-less and takes less than a minute.

1 INSERT FRONT SHOES

Slide the Front Shoe of the Gunsight Mandible into the Dovetail Channel of the FAST Side Rail (ARC) one side at a time as shown.

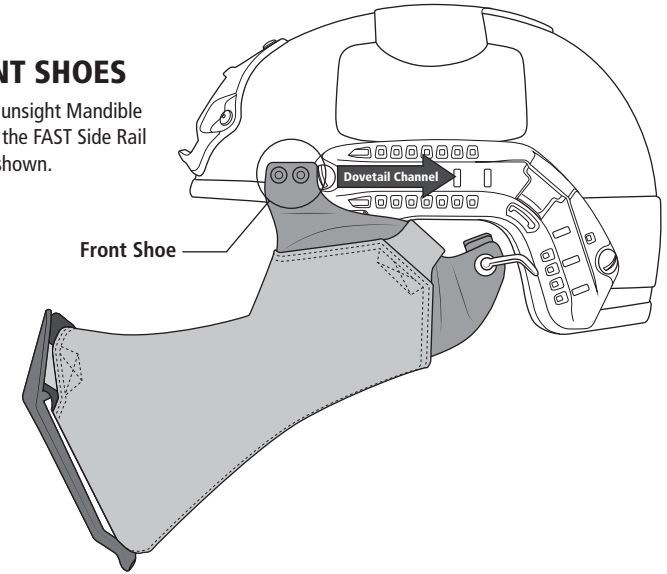

2 LOCK REAR CAM-LOC

Place the rear of the Gunsight Mandible against the lower Side Rail (ARC) Dovetail Channel with the Cam-Loc Handle in the up position. Make sure the small tab on the bottom of the Cam sits in the horizontal slot at the base of the dovetail. Gently rotate handle down into the locked position.

