



COUNTERWEIGHT KIT

FITS FAST AND SENTRY HELMETS

**COUNTERWEIGHT KIT IS
AVAILABLE IN:**



TAN



GREEN



BLACK

Total weight = .85lbs (385g)



PACKAGE CONTENTS



(1) Counterweight Pack



(5) Lead Weights




(2) 24mm Screws

(2) 17.5mm Screws

1

Remove existing screws and retain for future use of the helmet without Counterweight Kit. Remove T-nuts from the rear part of the Side Rails. Position the anchors of the Counterweight against the Rail holes and press the Counterweight against the helmet. Exterior Velcro will hold the Counterweight in place. Put the T-nuts into the anchors on the inside of the helmet. Then insert the provided screws 24mm* from the outside of the helmet through the Counterweight Anchor, Side Rail, Helmet Shell, Fitband, and Chinstrap Anchor and fasten to the T-nuts.

FAST Side Rail

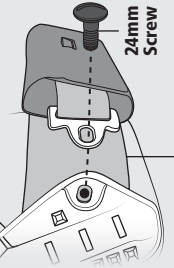


24mm
Screw

Rear Exterior Velcro

2

Use a screwdriver to tighten both screws, making sure the Counterweight is securely fastened to the rear of the helmet. Retain screws for future use of the helmet without Counterweight Kit.

***Note: 24mm screws are for ballistic helmets and 17.5mm screws are for non-ballistic helmets.**

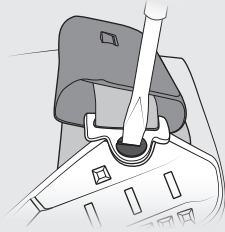

▲ WARNING

Adding weight to helmet increases risk of neck strain and injury. Only add counterweight when necessary to balance loads on front of helmet.