



VELCRO PLACEMENT GUIDE

 FAST BALLISTIC HIGH CUT	 SIDE	 TOP	 REAR
 FAST MARITIME KIT A	 SIDE	 TOP	 REAR
 FAST MARITIME KIT B	 SIDE	 TOP	 REAR
 FAST CARBON	 SIDE	 TOP	 REAR
 FAST BASE JUMP	 SIDE	 TOP	 REAR
 SENTRY	 SIDE	 TOP	 REAR
 LIGHTWEIGHT BALLISTIC HELMET (LBH)	 SIDE	 TOP	 REAR
 ADVANCED COMBAT HELMET (ACH)	 SIDE	 TOP	 REAR



REPLACEMENT EXTERIOR VELCRO® INSTALLATION INSTRUCTIONS

© OPS-CORE 2017 06-05-600 REV. E



Showing FAST Ballistic High Cut Replacement Velcro. Your velcro may vary.

HELMET TYPE	
FAST BALLISTIC HIGH CUT	<input type="checkbox"/>
FAST MARITIME KIT A	<input type="checkbox"/>
FAST MARITIME KIT B	<input type="checkbox"/>
FAST CARBON	<input type="checkbox"/>
FAST BASE JUMP	<input type="checkbox"/>
SENTRY	<input type="checkbox"/>
LIGHTWEIGHT BALLISTIC HELMET (LBH)	<input type="checkbox"/>
ADVANCED COMBAT HELMET (ACH)	<input type="checkbox"/>

SIZE	
S (S)	<input type="checkbox"/>
M (S/M)	<input type="checkbox"/>
L (M/L)	<input type="checkbox"/>
XL (L/XL)	<input type="checkbox"/>
XXL (XXL)	<input type="checkbox"/>

COLOR	
TAN	<input type="checkbox"/>
GREEN	<input type="checkbox"/>
BLACK	<input type="checkbox"/>

www.ops-core.com





MADE IN USA

OLD VELCRO® REMOVAL

1 CAREFULLY REMOVE OLD VELCRO

NOTE: DO NOT RIP THE VELCRO OFF. THIS WILL CAUSE SEVERE DAMAGE TO THE PAINT ON THE HELMET SHELL.

Using your fingers, carefully peel the Velcro away from the helmet shell. **DO NOT BRISKLY RIP THE VELCRO OFF!** Continue this process by slowly pulling it back until all Velcro is removed.

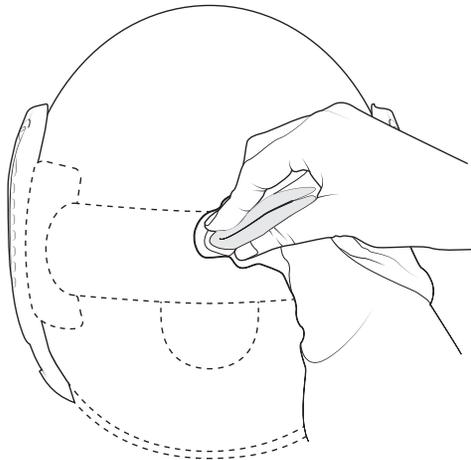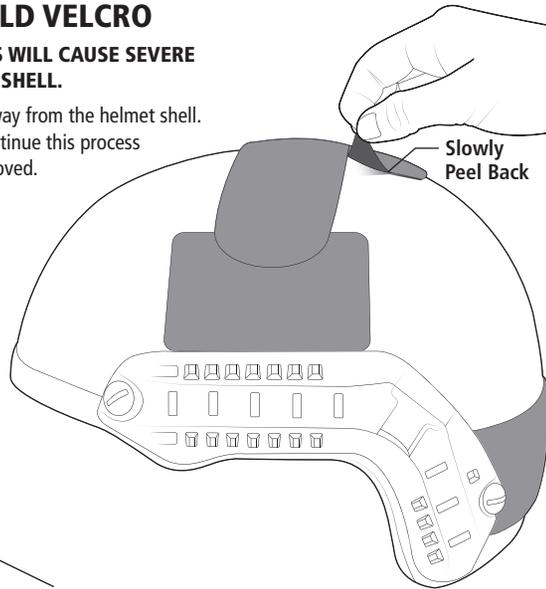


2 CLEAN THE HELMET SHELL

To remove excess adhesive from old Velcro and to ensure optimal adhesion of new Velcro, gently rub affected areas with a clean towel and Isopropyl Rubbing Alcohol. Do not use harsh chemicals. If traces of adhesive remain, you can use Goo Gone® to remove stubborn residue. Wipe the area with alcohol again after use. Allow the helmet to dry before attempting to place new Velcro onto the shell's surface.

3 PLACEMENT PREPARATION

Using the "Velcro Placement Guide" on the back page and the "New Velcro Installation" steps to the right, carefully align all Velcro pieces to their proper positions. Test fit all pieces before removing the backing. The adhesive on this Velcro is pressure sensitive. Once in place it needs to be pressed down firmly. Allow up to 24 hours for adhesive to reach maximum bonding strength.

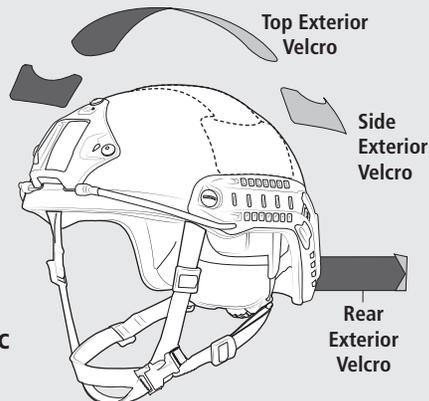


***ALL DIAGRAMS ARE SHOWING THE FAST BALLISTIC HIGH CUT HELMET. YOUR HELMET SHELL AND VELCRO PATTERN MAY VARY.**

NEW VELCRO INSTALLATION

4 INSTALL REAR EXTERIOR VELCRO



Align the notches of the Rear Exterior Velcro with the rear edges of the FAST Side Rails (ARCs). Make sure the Velcro stays level.

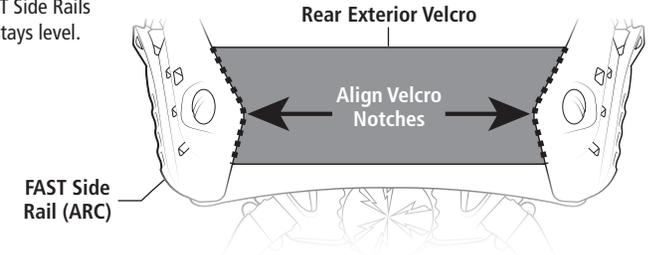

5 INSTALL SIDE EXTERIOR VELCRO

NOTE: IF YOU HAVE A FAST CARBON HELMET BEGIN INSTALLATION WITH TOP EXTERIOR VELCRO FIRST (STEP 6 THEN STEP 5).

Begin with left side first. Use the FAST Side Rail (ARC) on helmet as a reference point. Align the Side Exterior Velcro to the top of the 1st notch as shown in the diagram below. The bottom edge of Velcro should be flush with the top of the FAST Side Rail (ARC). Repeat these instructions for right side.

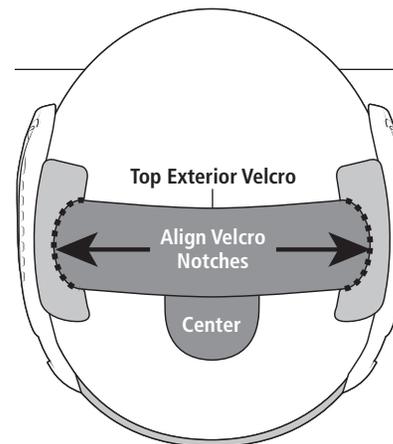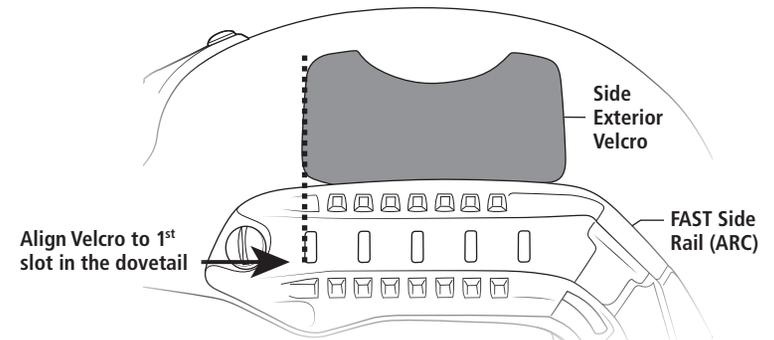

6 INSTALL TOP EXTERIOR VELCRO

NOTE: FOR FAST CARBON HELMETS ALIGN TOP EXTERIOR VELCRO HOLES TO HELMET SHELL HOLES.

Align rounded ends of Top Exterior Velcro to notches in the Side Exterior Velcro pieces. If your Velcro Kit came with an additional top piece, align it to the center of the helmet shell. Refer to the "Velcro Placement Guide" on back page for specific Velcro patterns and placement.