



O2 DOUBLE STRAP KIT FOR FAST HELMETS

■ O2 Mask Sold Separately



Featuring:
Head-Loc®



MADE IN USA

Fits Carleton PHANTOM™ & Para-Flite PHAOS™ O2 Masks



TAN



Part # 26-99-101

GREEN



Part # 26-99-102

BLACK



Part # 26-99-103

www.opscore.com

06-05-800 REV. A


INSTALLATION INSTRUCTIONS

PACKAGE CONTENTS = (1) Left Side FAST O2 Double Strap, (1) Right Side FAST O2 Double Strap

Install the O2 Mask Straps using your O2 mask's existing hardware so that the Front-Pull Release Buckle is positioned on the side opposite of the O2 Connector.


For Carleton PHANTOM™

Install the strap ends on the outside of the plastic housing as shown.

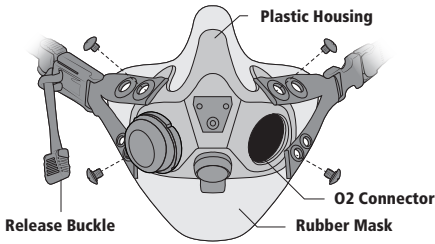

For Para-Flite PHAOS™

Install the strap ends in between the plastic housing and rubber face mask as shown.

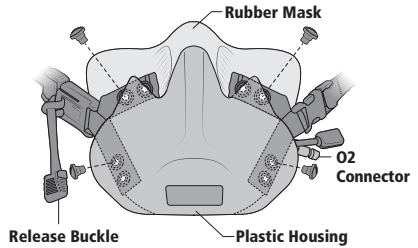


STRAP INSTALLATION

STEP 1

Insert Swivel Clip brackets into FAST Side Rails (ARCs) as shown.

STEP 2



Attach O2 Mask Strap mounted Swivel Clip.

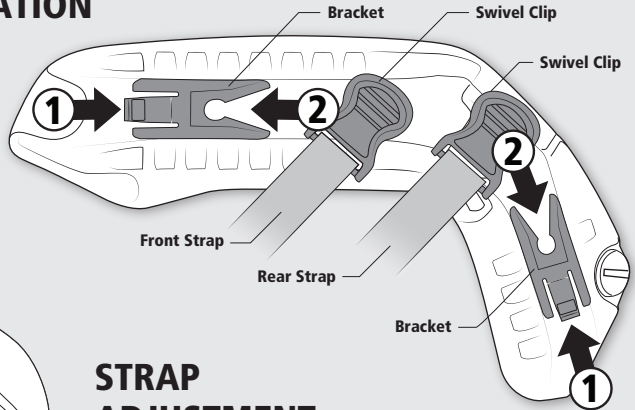

STRAP ADJUSTMENT

Slide the Head-Loc® Tabs toward or away from your face to tighten or loosen the straps respectively.

Head-Loc®

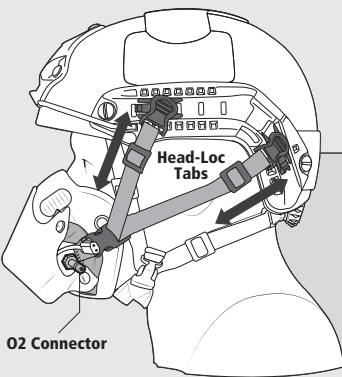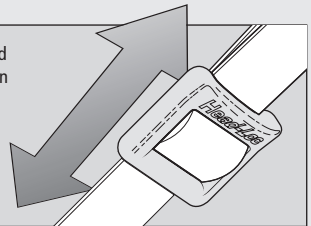

OPS-CORE, INC.
Marine Industrial Park
12 Channel Street
Boston, MA 02210

Tel: 617.670.3547
Fax: 617.670.3581

Or visit our website
at www.ops-core.com