



O2 SINGLE STRAP KIT FOR FAST & ACH HELMETS

- Requires Ops-Core FAST / ACH Side Rails (ARCs)
- O2 Mask Sold Separately



**Fits Carleton PHANTOM™ &
Para-Flite PHAOS™ O2 Masks**



TAN



Part # 26-99-301

GREEN



Part # 26-99-302

BLACK



Part # 26-99-303


INSTALLATION INSTRUCTIONS

PACKAGE CONTENTS = (1) Left Side O2 Single Strap, (1) Right Side O2 Single Strap

Install the O2 Mask Straps using your O2 mask's existing hardware so that the Front-Pull Release Buckle is positioned on the side opposite of the O2 Connector.


For Carleton PHANTOM™

Install the strap ends on the outside of the plastic housing as shown.

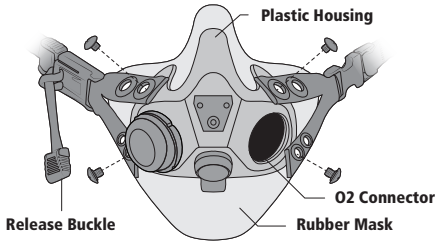



For Para-Flite PHAOS™

Install the strap ends in between the plastic housing and rubber face mask as shown.

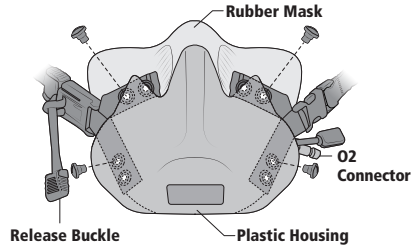

STRAP INSTALLATION


Insert O2 Buckle into the Corner Buckle Receiver on the FAST / ACH Side Rails (ARCs) as shown.

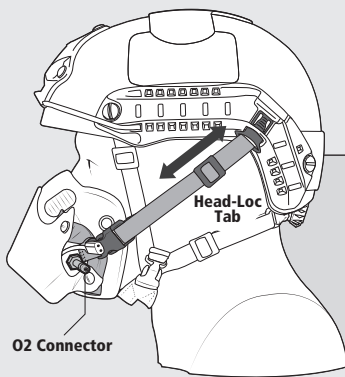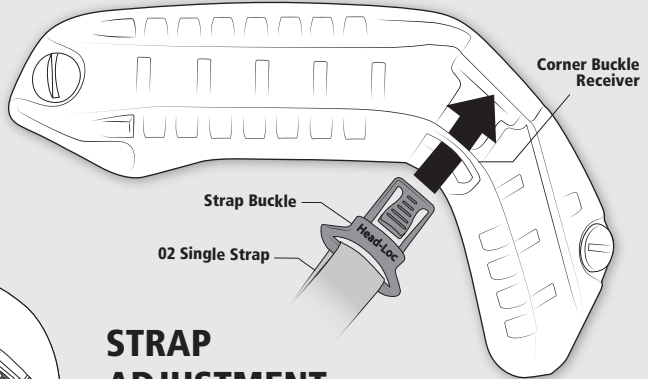

STRAP ADJUSTMENT

Slide the Head-Loc® Tabs toward or away from your face to tighten or loosen the straps respectively.

Head-Loc®

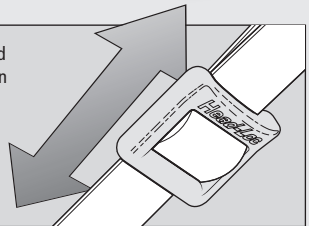

OPS-CORE, INC.
Marine Industrial Park
12 Channel Street
Boston, MA 02210

Tel: 617.670.3547
Fax: 617.670.3581

Or visit our website
at www.ops-core.com