



# FAST SIDE ARMOR

FOR FAST HELMETS



## COLOR

TAN



GREEN




BLACK



## PROFILE

HIGH CUT



WIDE SLIM

SUPER HIGH CUT



WIDE SLIM

# INSTALLATION INSTRUCTIONS

PACKAGE CONTENTS = (1) FAST Side Armor (Left), (1) FAST Side Armor (Right)


## STEP 1

Align the diagonal edges of the front shoe to the rail.





## STEP 2

Rotate the side armor up and place the rear of the side armor against the lower side rail Dovetail channel with the cam-loc handle in the "unlock" position.

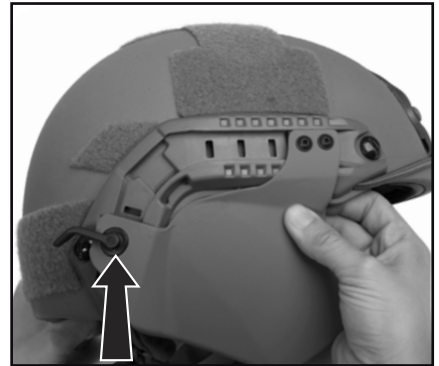

## STEP 3

**CRITICAL:** With the cam in place, pull the front shoe forward toward the front of the rail as close to the nut as possible. Maintain the pull and gently rotate handle down into the locked position.

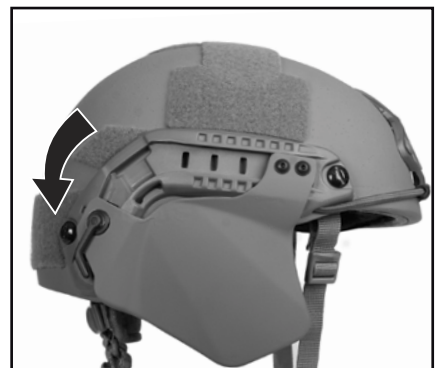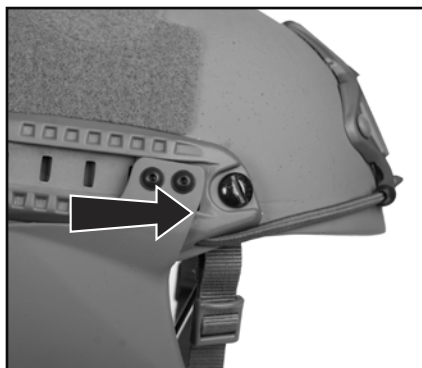

OPS-CORE, INC.  
Marine Industrial Park  
12 Channel Street  
Boston, MA 02210

Tel: 617.670.3547  
Fax: 617.670.3581

Or visit our website  
at [www.ops-core.com](http://www.ops-core.com)