


INSTALLATION PROCEDURE

6 REMOVE THE PLASTIC COVER


After the Impact Liner is installed, remove the Plastic Cover by pulling it out while holding the Impact Liner and helmet shell together. Start with the front piece and then remove the back piece (the middle of the Plastic Cover is perforated so it will break apart in half). Once the plastic cover is removed, press down firmly on the Vented Lux Liner. The helmet's loop Velcro and chinstrap anchors will hold the Vented Lux Liner in place.

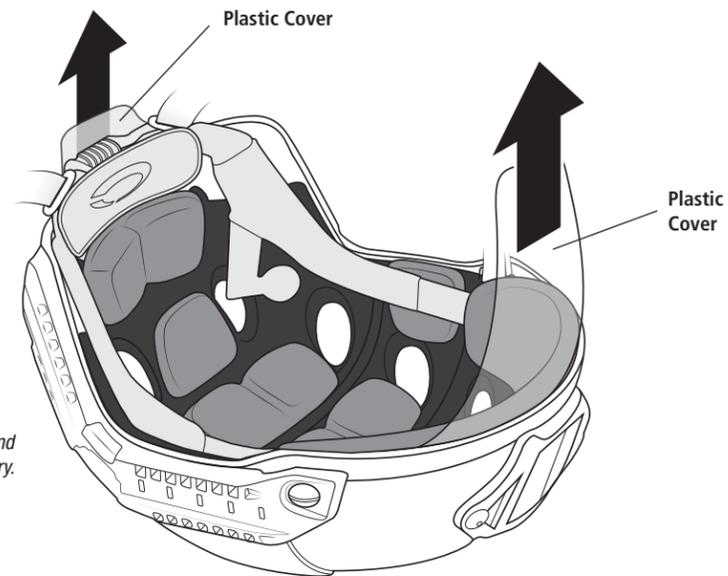

Showing Worm-Dial Fitband version. Your liner may vary.

7 ADJUST COMFORT LEVEL

Pads can be rearranged in a variety of positions utilizing different thicknesses to achieve optimal level of comfort.

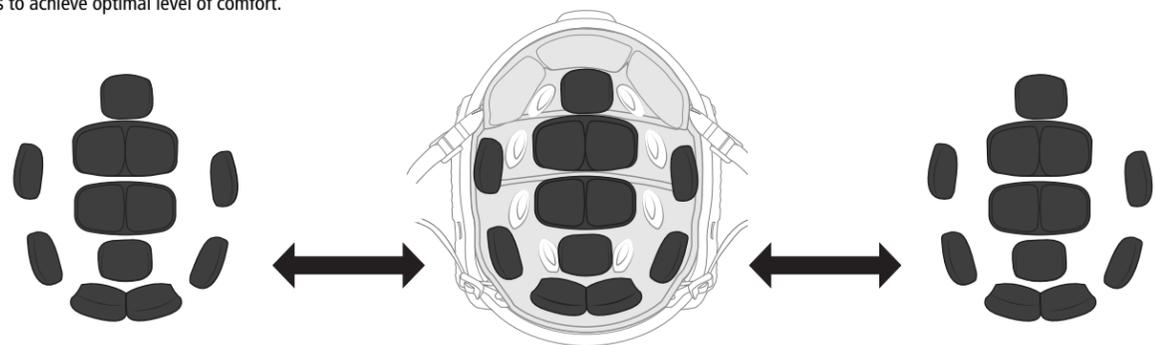

1/4" COMFORT PADS

1/2" COMFORT PADS

3/4" COMFORT PADS

CLEANING AND CARE

1. Spot-clean the Vented LUX Liner with a mild detergent and water.
2. Visually check the Vented LUX Liner for signs of wear and breakage.
3. Clean dust and dirt by using air pressure.

NOTE: IF ANY DEFECTS ARE FOUND, THE DAMAGED COMPONENTS SHOULD BE REPLACED BEFORE USE.

www.ops-core.com



FAST

FUTURE ASSAULT SHELL TECHNOLOGY

VENTED LUX LINER KIT

OPERATOR'S MANUAL



H-NAPE
CHINSTRAP VERSION



OCC-DIAL
FITBAND VERSION



WORM-DIAL
FITBAND VERSION

FEATURES

- EPP Liner provides a full coverage layer that outperforms competitive products and provides blunt trauma protection
- Vented to provide breathable comfort for all-day use
- Pads are wrapped in a breathable, moisture-wicking outer fabric that is comfortable and easy to clean

FOR FAST STYLE HELMETS

UM-1013 REV. C





© 2018 Gentex Corporation. Ops-Core and the Ops-Core logo are registered trademarks of Gentex Corporation.

INTRODUCTION

VENTED LUX LINER KIT:

This manual covers the installation and basic operating instructions for the Vented LUX Liner. The liner is designed to fit a FAST Style Helmet using either a Worm-Dial Fitband with Chinstrap, Occ-Dial Fitband with Chinstrap, or H-Nape Chinstrap. Advanced materials and design work with one another to enhance resistance to rotational forces of standard retention systems and deliver constant protection.


VENTED LUX LINER KIT INCLUDES:

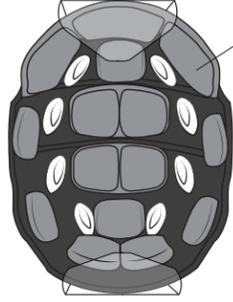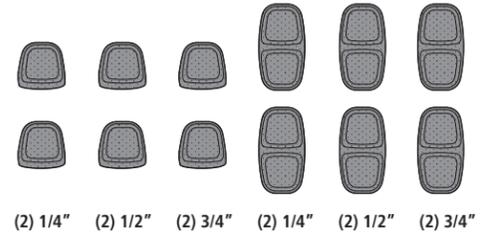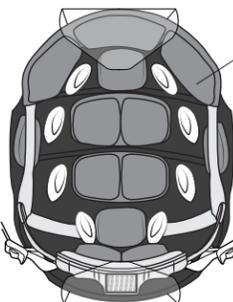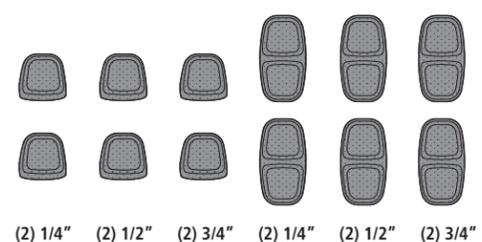H-NAPE CHINSTRAP VERSION	 <p>KIT INCLUDES:</p> <ul style="list-style-type: none"> (1) Impact Liner (1) H-Nape Chinstrap <p>Comfort Pads:</p> <ul style="list-style-type: none"> (2) 1/2" Double pads (1) 3/4" Double pad (4) 1/4" Single pads (2) 1/2" Single pads 	<p>ADDITIONAL PADS (Also Included)</p>  <p>(2) 1/4" (2) 1/2" (2) 3/4" (2) 1/4" (2) 1/2" (2) 3/4"</p>
WORM-DIAL / OCC-DIAL FITBAND VERSIONS	 <p>KIT INCLUDES:</p> <ul style="list-style-type: none"> (1) Impact Liner (1) Worm-Dial Fitband with Chinstrap <p>Comfort Pads:</p> <ul style="list-style-type: none"> (2) 1/2" Double pads (1) 3/4" Double pad (2) 1/4" Single pads (2) 1/2" Single pads 	<p>ADDITIONAL PADS (Also Included)</p>  <p>(2) 1/4" (2) 1/2" (2) 3/4" (2) 1/4" (2) 1/2" (2) 3/4"</p>

1 DETACH EXISTING FITBAND

Place your index finger behind the center of the Fitband Comfort Pad and carefully bend away from the Front EPP Pad as shown. Pinch the Fitband Comfort Pad and use your thumb to slide the pad sideways 1/2" towards the center of the helmet along the Front EPP Pad. Repeat on both sides until the pad is released from the key slots.

NOTE: DO NOT PULL THE FITBAND COMFORT PAD AWAY FROM THE FRONT EPP PAD OR YOU MAY BREAK THE FRONT EPP PAD KEY SLOTS.

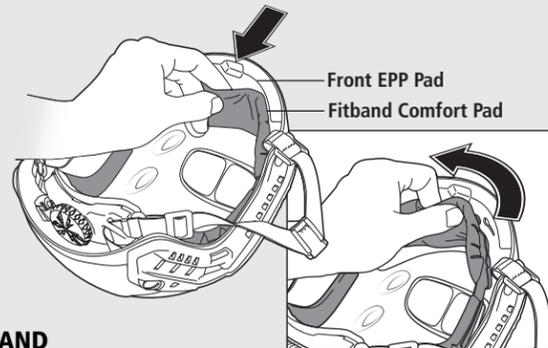


2 REMOVE FITBAND

Unscrew and remove all four Screws and T-Nuts. Once removed, the fitband will no longer be attached to the helmet. This will also release the Side Rails. Set them aside with the hardware.

3 REMOVE FRONT EPP PAD

Front EPP Pad will still be attached to the inside of the shell by hook and loop Velcro®. Carefully peel Front EPP Pad away from helmet shell to remove. Detach and remove all EPP Comfort Pads from helmet shell.

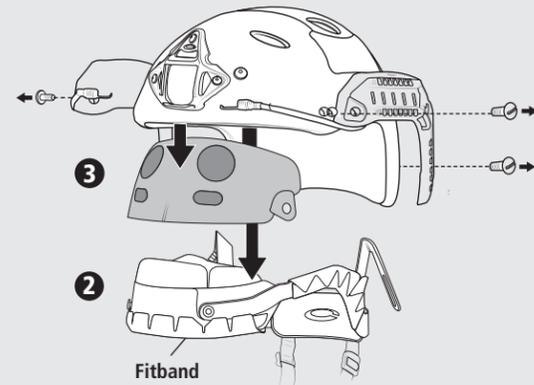


INSTALLATION PROCEDURE

4 IMPACT LINER ALIGNMENT

NOTE: PLASTIC COVERING MUST STILL BE ATTACHED FOR THIS STEP.

Using the diagram below, place the Impact Liner into the helmet shell as shown. Align the four notches in the Impact Liner to the four chinstrap holes in the helmet shell. Once aligned, carefully and firmly press the Impact Liner into the shell with Plastic Cover still attached.

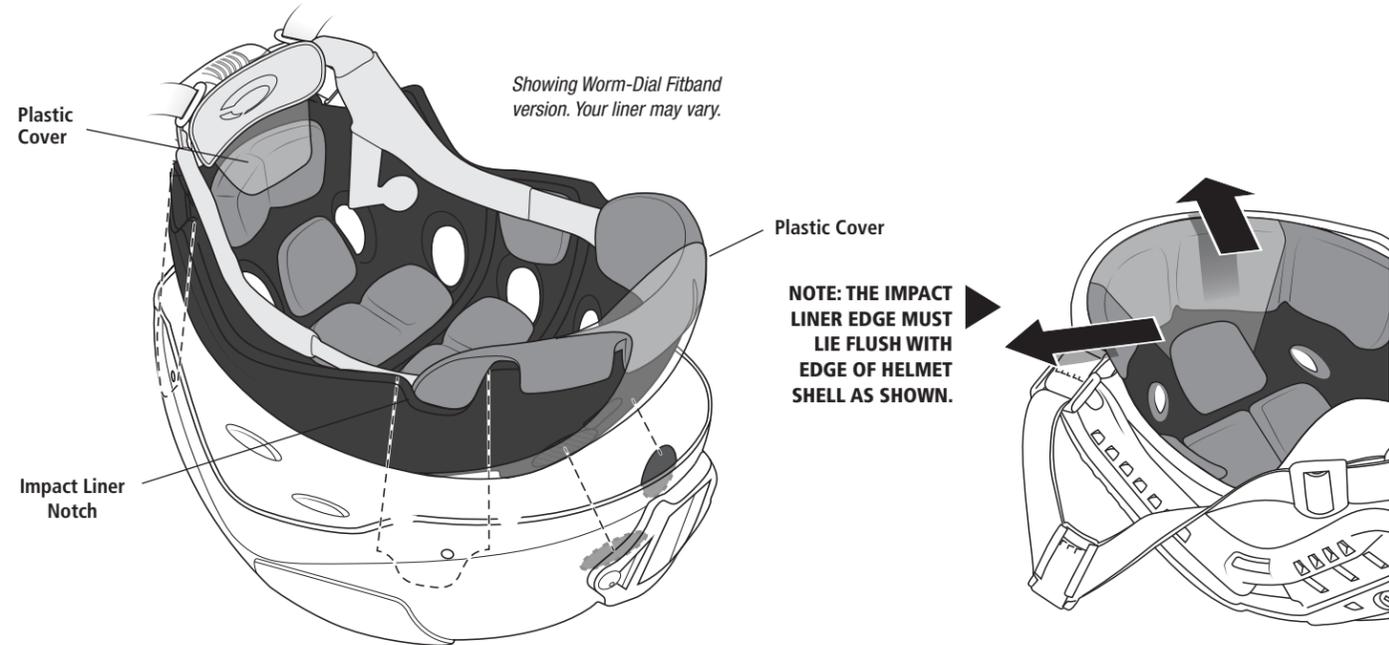

5 CHINSTRAP INSTALLATION & HELMET REASSEMBLY

Align Side Rails, Chinstrap Anchors, and Hardware to the chinstrap holes in your helmet. Place T-Nuts on the inside of Chinstrap Anchors and fasten all screws and T-Nuts as shown.

VENTED LUX LINER WITH H-NAPE / WORM-DIAL FITBAND

VENTED LUX LINER WITH OCC-DIAL FITBAND

CONTINUE INSTRUCTIONS ON NEXT PAGE →