




CAGE 33ES4

## Generic Foam Tip and Argonaut® Communication Earplug

- Generic foam tips for the Argonaut® Communication Earplug (ACE) come in two different sizes: standard and slim
  - Standard foam tips fit most individuals
  - If experiencing discomfort while using the standard foam tip, switch to the slim foam tip
  - Individuals with relatively small ear canals should use the slim foam tip
- The tip of the ACE is threaded and matches the threads of the foam tip
- Carefully thread the foam tip on the ACE until the foam touches the black housing
- Grip the housing and the foam tip and tighten an additional  $\frac{1}{4}$  turn – Do not over tighten
- This method ensures that flanking sound paths are minimized

### User Instructions

- Using your thumb and index finger, roll the foam tip into narrowest possible crease-free cylinder
- Reach over your head with free hand, pull your ear up and back, and before it expands, insert the compressed foam tip into the ear canal
- Ensure that the foam tip is deeply seated in the ear canal and hold to allow for expansion, such that it cannot be easily seen by those around you when fully inserted
- Position the cable in the preferred position (over the ear vs. straight down)
- Fit the other ear in the same manner

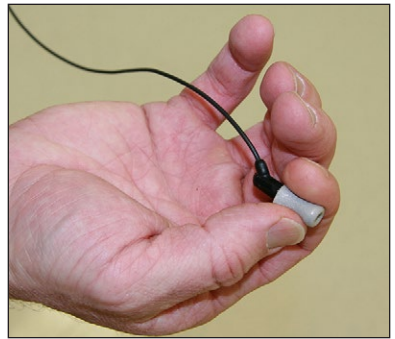

P/N	NSN	Part Description
05-016017	4220016099415	Argonaut® Comm. Earplug
05-016024	4220016143872	100 Pair Box Standard Tips
05-016023	4220016143873	100 Pair Box Slim Tips

## Low Profile Custom Communication Eartip (LPCCE) and Argonaut® Communication Earplug

Apply pressure to the back of the black housing while inserting the threaded end into the LPCCE until it will go no further.

### User Instructions



- Lubricate earplugs with water or Aegisound Ear Gel along the earplug canal, if preferred
- Gently insert the tip of the earplug into ear canal ensuring that the “R” (right ear) or “L” (left ear) indicator is located at the bottom of the ear canal, facing downward
- Reach over your head with free hand, pull your ear up and back, and push the ear plug in until it is fully seated in the canal. There should be no gaps between the earplug and the perimeter of the ear canal, as shown below
- Orient cable direction as desired (see below)
- Fit the other ear in the same manner

### How to Order

Orders can be processed individually or for a group. To place an order call: 1-603-657-1200.

For more information, call or visit our website at: [www.gentecorp.com](http://www.gentecorp.com)

P/N	NSN	Part Description
05-016017	4220016099415	Argonaut® Comm. Earplug
05-016020		LPCCE

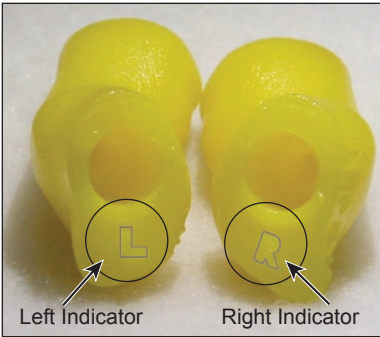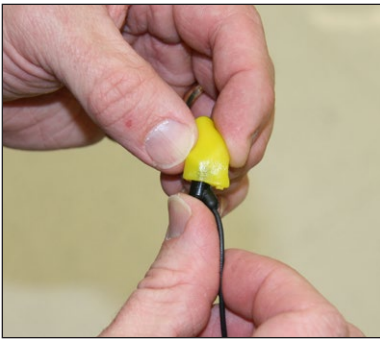

The cable can be oriented in either of two ways:

Over The Ear



Straight Down

