




CAGE 7L772

Generic Foam Tip and Argonaut® Communication Earplug

- Generic foam tips for the Argonaut Communication Earplug (ACE) come in two different sizes: standard and slim
 - Standard foam tips fit most individuals
 - If experiencing discomfort while using the standard foam tip, switch to the slim foam tip
 - Individuals with relatively small ear canals should use the slim foam tip
- The tip of the ACE is threaded and matches the threads of the foam tip
- Carefully thread the foam tip on the ACE until the foam touches the black housing
- Grip the housing and the foam tip and tighten an additional $\frac{1}{4}$ turn – Do not over tighten
- This method ensures that flanking sound paths are minimized

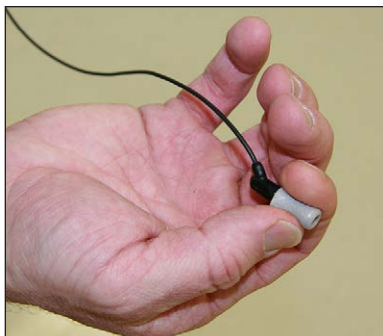

User Instructions

- Using your thumb and index finger, roll the foam tip into narrowest possible crease-free cylinder
- Reach over your head with free hand, pull your ear up and back, and before it expands, insert the compressed foam tip into the ear canal
- Ensure that the foam tip is deeply seated in the ear canal and hold to allow for expansion, such that it cannot be easily seen by those around you when fully inserted
- Position the cable in the preferred position (over the ear vs. straight down)
- Fit the other ear in the same manner



How to Order

P/N	NSN	Part Description
05-016017	4220016099415	Argonaut® Communication Earplug
05-016024	4220016143872	100 Pair Box Standard Tips
05-016023	4220016143873	100 Pair Box Slim Tips

Orders can be processed individually or for a group. To place an order call 1-603-657-1200. For more information, call or visit our website at www.gentexcorp.com

