

## MAINTENANCE

### CLEANING AND CARE

1. Spot-clean the ACH Mandible with a mild detergent and water.
2. Visually check the entire ACH Mandible for signs of breakage.
3. Clean dust and dirt by using air pressure.
4. Check that the ARC Rail Clip and straps work properly.

**NOTE: IF ANY DEFECTS ARE FOUND, THE DAMAGED COMPONENTS SHOULD BE REPLACED BEFORE USE.**



# ACH MANDIBLE

## OPERATOR'S MANUAL



[www.ops-core.com](http://www.ops-core.com)

**FOR LOW CUT ACH/TBH HELMETS**  
Equipped with Ops-Core Skeleton Accessory Rail Connectors (ARCs) Only.

© OPS-CORE 2016 UM-1007 REV.A

# INTRODUCTION

## ABOUT YOUR MANDIBLE:


This manual covers the installation and basic operating instructions for the Ops-Core Advanced Combat Helmet (ACH) Mandible. The ACH Mandible provides additional face protection from blunt trauma and ballistic threats.

Installation and removal is tool-less. The mandible exhausts moisture through the folding slots and conveniently folds for compact storage.



## ACH MANDIBLE KIT INCLUDES:

(1) ACH Mandible

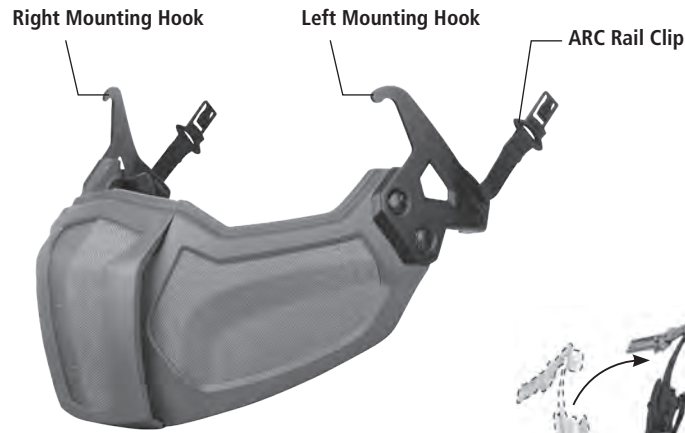


Folds for Easy Storage

# INSTALLATION PROCEDURE

The ACH Mandible quickly attaches to the ACH Helmet without the use of tools.

## 1 INSERT MOUNTING HOOKS

Insert both the Left and Right Mounting Hooks into the Skeleton ARC Rail Hook Receivers as shown. Once both Mounting Hooks are inserted, push down on the front of the ACH Mandible until the Mounting Shoes are pressed evenly against the ACH helmet's shell edge.

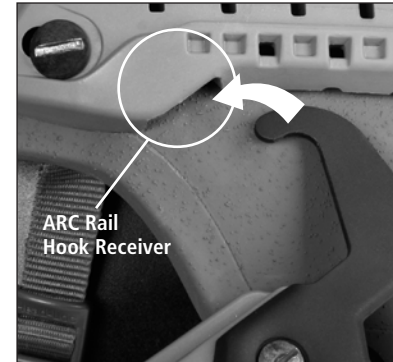

## 2 SECURE ARC RAIL CLIPS

Insert and fasten the ARC Rail Clips as shown.

**NOTE: ADJUST THE LENGTH OF THE ARC RAIL CLIP STRAP SO THAT THERE IS NO SLACK AND IT CREATES A TIGHT, SECURE FIT.**

