

CLEANING & CARE

CLEANING & CARE

- 1 Spot-clean the Moto Mandible with a mild detergent and water.
- 2 Visually check the entire Moto Mandible for signs of breakage.
- 3 Clean dust and dirt by using air pressure.
- 4 Check that the ARC Rail clip and straps work properly.

NOTE: IF ANY DEFECTS ARE FOUND, THE DAMAGED COMPONENTS SHOULD BE REPLACED BEFORE USE.



MOTO MANDIBLE OPERATOR'S MANUAL

© OPS-CORE 2015 UM-1000 REV. B



www.ops-core.com

FOR SENTRY HELMETS

INTRODUCTION


ABOUT YOUR MANDIBLE:

This manual covers the installation and basic operating instructions for the Ops-Core Moto Mandible. The Moto Mandible provides additional face protection from blunt trauma and ballistic threats.



MOTO MANDIBLE KIT INCLUDES:

(1) Moto Mandible

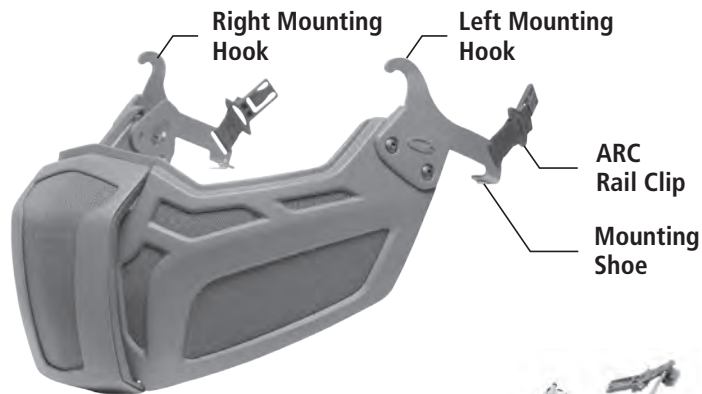

Collapses for Easy Storage

MANDIBLE INSTALLATION

ATTACHMENT

The Moto Mandible quickly attaches to the Sentry Helmet without the use of tools.

1 INSERT MOUNTING HOOKS

Insert both the Left and Right Mounting Hooks into the ARC Rail Hook Receivers as shown. Once both Mounting Hooks are inserted, push down on the front of the Moto Mandible until the Mounting Shoes are pressed evenly against the Sentry helmet's shell edge.



2 SECURE ARC RAIL CLIPS

Insert and fasten the ARC Rail Clips as shown.

NOTE: ADJUST THE LENGTH OF THE ARC RAIL CLIP STRAP SO THERE IS NO SLACK AND THAT IT CREATES A TIGHT, SECURE FIT FOR THE MANDIBLE.

